

## PROGRAMMING NEW REMOTE CONTROLS

It is possible to program up to 4 remote controls.

To program new remote controls you will need your PIN code and the ignition key. To enter the programming follow the procedure below:

- 1 With the alarm system disarmed, switch the ignition ON/OFF **6 times**, approximately one second between ON and OFF.
- 2 After a brief pause, the system is ready to receive your PIN code. Watch carefully the LED flashes.
- 3 When the number of flashes equals your first PIN code number switch the ignition ON-OFF
- 4 Repeat step 3 for the other three numbers of your PIN code.
- 5 Completing the procedure correctly, the LED will flash 14 times.. The system is now ready to receive new remote controls.
- 6 Press twice button "B" of each remote control (after each press you will hear a beep).  
During point 6 the, number of the LED flashes will increase and they will be equal to the number of remote controls programmed.
- 7 Switch the Ignition ON and press button "B" on one of the remote to close the programming procedure.
- 8 Turn the ignition OFF and check that all remote controls work properly.