


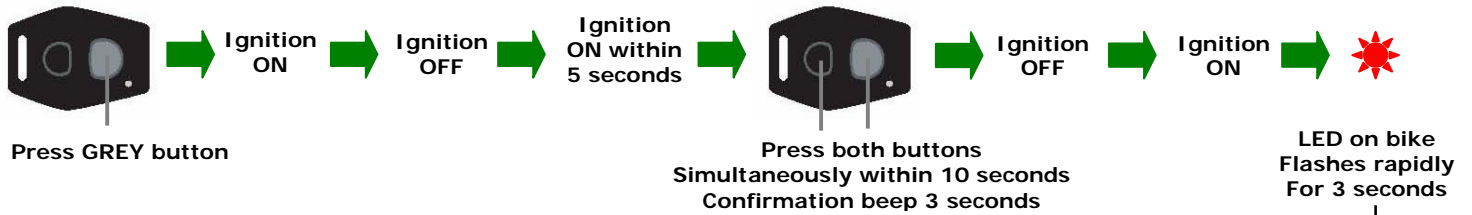

DATATOOL

Coding new transmitters, changing siren tones, passive arming selection

Example PIN learn Number being learnt 1426



ONE LONG TONE Repeat procedure to confirm new PIN

To set first digit	To set second digit	To set third digit	To set fourth digit	→	To confirm first digit	To confirm second digit	To confirm third digit	To confirm fourth digit
One beep/ flash Ignition OFF	Ignition ON Four beeps/ flashes Ignition OFF	Ignition ON Two beeps/ flashes Ignition OFF	Ignition ON Six beeps/ flashes Ignition OFF		Ignition ON One beep/ flash Ignition OFF	Ignition ON Four beeps/ flashes Ignition OFF	Ignition ON Two beeps/ flashes Ignition OFF	Ignition ON Six beeps/ flashes Ignition OFF
1000	1400	1420	1426		1000	1400	1420	1426

New PIN
1426


TWO SHORT TONES

(3 long tones if incorrect confirmation)

The PIN can be changed at any time by entering a new number by the above procedure

Coding new transmitters, changing siren tones, passive arming selection

It will not be possible to follow the procedures below without first having registered a PIN number to the alarm system

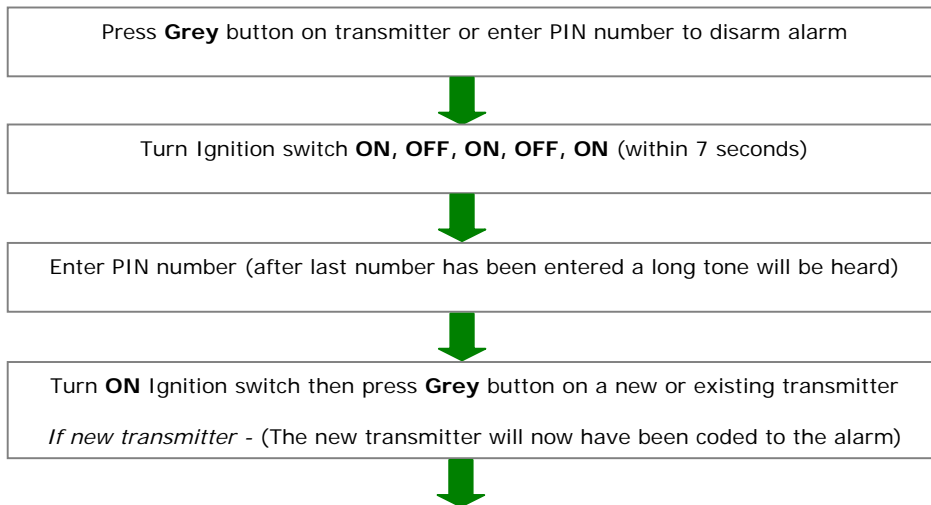

Turn **OFF** Ignition switch (Two tones will be heard)
If only programming a new transmitter leave the ignition switch off for at least 15 seconds

To proceed to siren tone or passive arming section (Software Switches) turn Ignition back ON Within 15 seconds of hearing these tones

	Software Switch number Toggle to desired Switch	Press buttons as shown below to enter desired Switch	Method of altering setting and accepting To exit Software switches at any time turn Ignition switch off for at least 15 seconds
↑	Switch 1 (For customer use) <u>Change siren tones</u> Press Grey button to toggle to switch 2 & 3 (Alarm will beep once to confirm switch number)	 Press	Grey button = Next tone ● Black button = Previous tone ●
↑	Switch 2 (For customer use) <u>Alarm arming method</u> (Alarm will beep twice to confirm switch number)	 Press	Grey button/LED ON = Full passive arming ● Black button/LED OFF = Passive Immobiliser (Default) ●
↓	Switch 3 (For dealer use only) <u>Entry to Engineer Switches</u> Press Black button to toggle to switch 2 & 1 (Alarm will beep three times to confirm switch number)	For dealer use only	For dealer use only

To toggle between switches

← Press Both buttons to save and exit back to switch selection